


NOTES:

1. FIRE HYDRANTS SHALL NOT BE INSTALLED IN EXISTING OR PROPOSED SIDEWALKS
2. FIRE HYDRANTS SHALL BE INSTALLED PRIMED ONLY. THEY SHALL BE PAINTED AFTER INSTALLATION.
3. FIRE HYDRANTS SHALL BE COATED WITH 2 COATS BENJAMIN MOORE PAINT RUST INHIBITOR #16378 ALUMINUM OR EQUAL.
4. DOUBLE WRAP ALL D.I. FITTINGS WITH POLY WRAP INCLUDING BOLTS AND NUTS.
5. INSTALL RESTRAINED OFFSET BENDS OR "GRADELOCK" FITTINGS ON FIRE HYDRANT SUPPLY LINE SO FIRE HYDRANT BURY DEPTH IS NO GREATER THAN SIX FEET.
6. ALL FITTINGS SHALL INCORPORATE MEGALUG MECHANICAL JOINT RESTRAINTS OR APPROVED EQUAL.
7. SWIVEL SOLID ADAPTER ON CONCRETE CYLINDER PIPE FLANGED OUTLET.

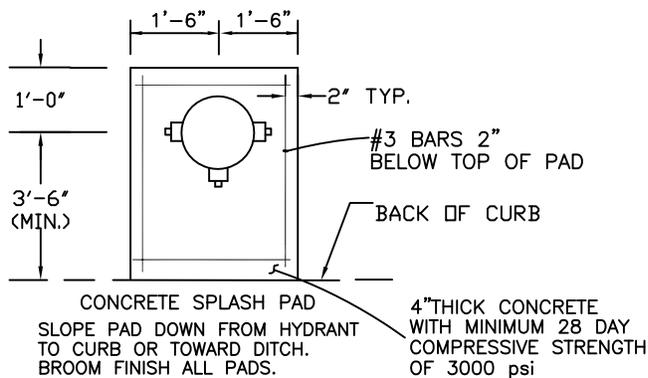

W-02	FIRE HYDRANT	
CITY OF BURLESON		
ORIGINAL	10/6/06	SWC
REVISION		
REVISION		
REVISION		